


SEAT HEATER SYSTEM


PARTS LOCATION

SE

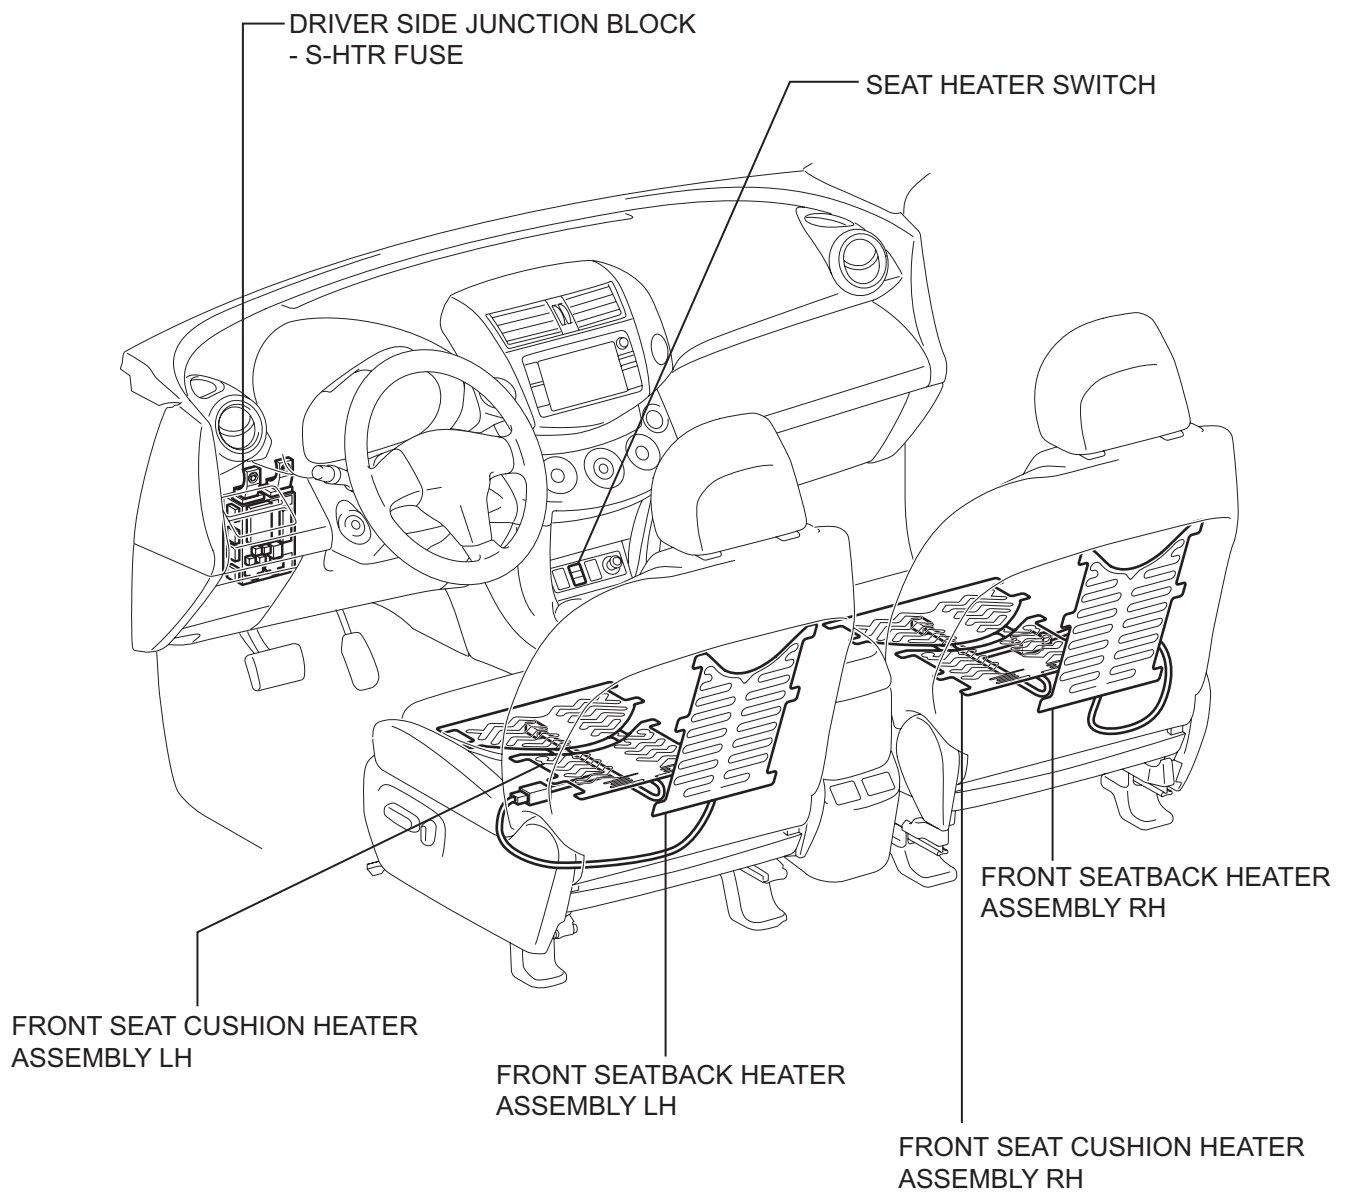

SYSTEM DIAGRAM

SE

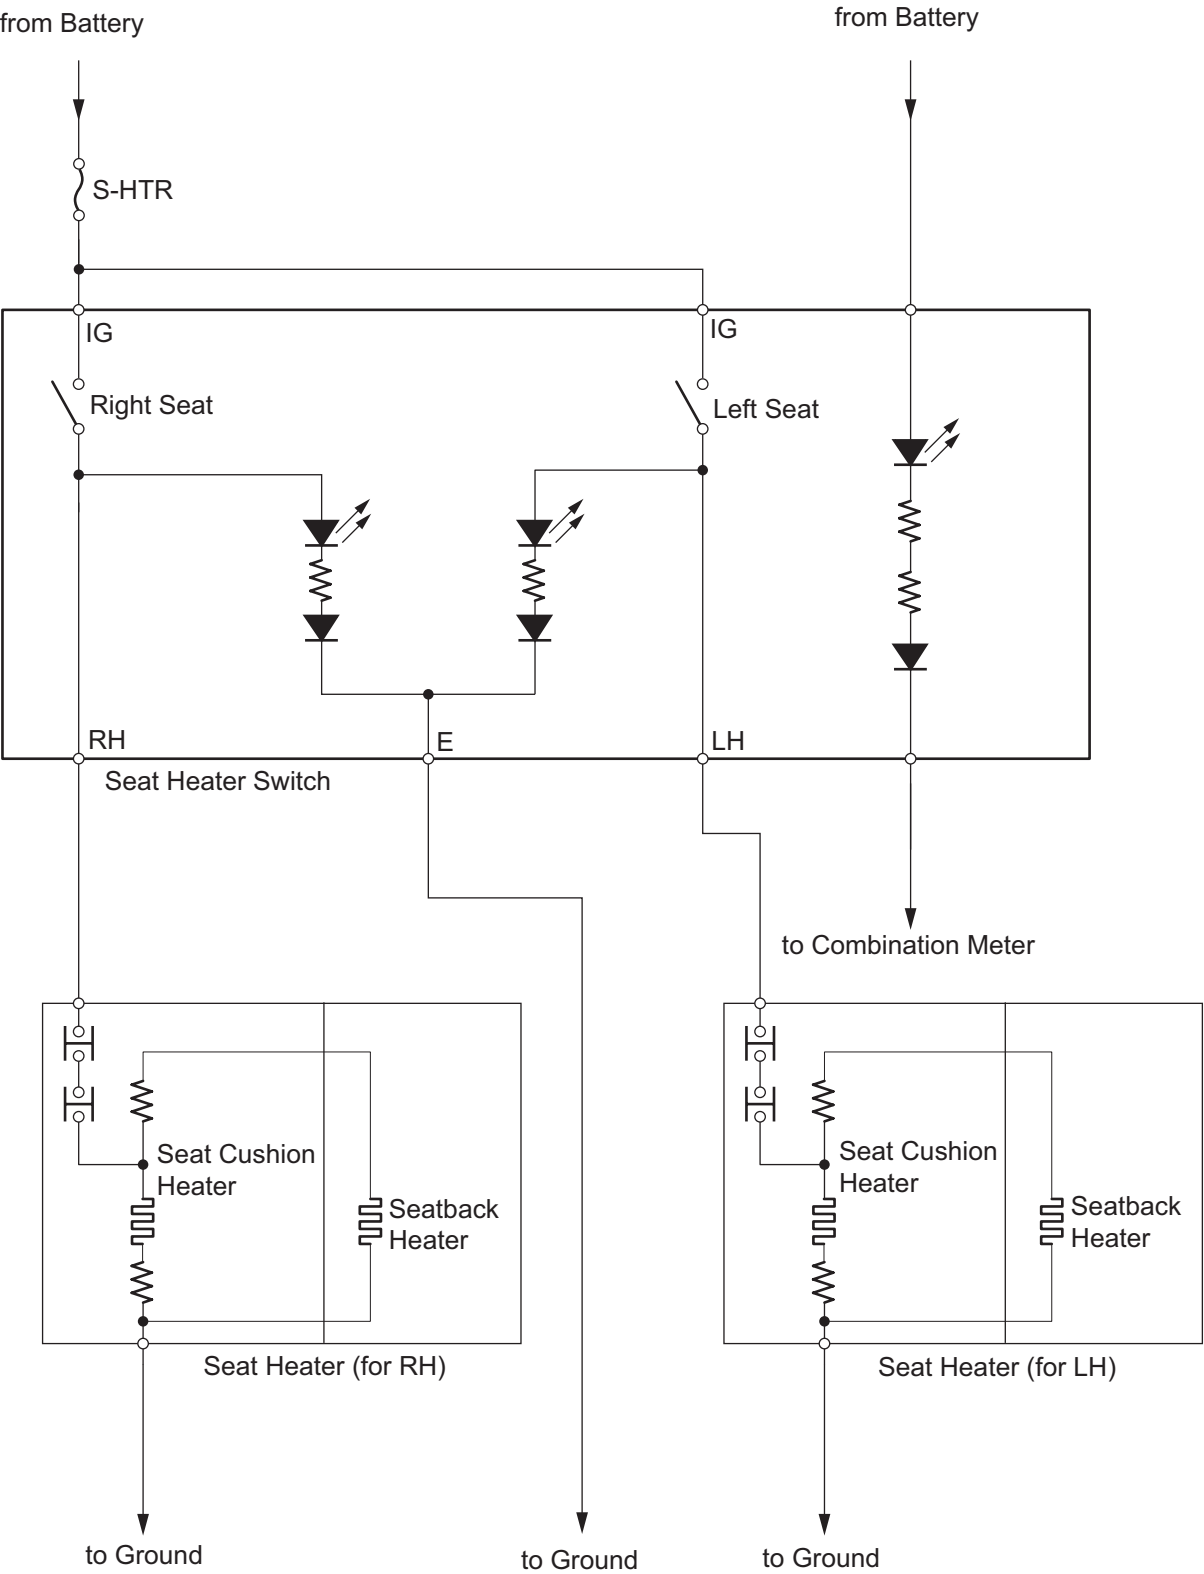

PROBLEM SYMPTOMS TABLE

HINT:

Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Seat heater system

Symptom	Suspected area	See page
Driver's and passenger's seat heaters do not warm up	1. S-HTR fuse	SE-5
	2. Seat heater switch	SE-130
	3. Wire harness	-
Only driver's seat heater does not warm up	1. Front seat cushion heater LH	SE-133
	2. Front seatback heater LH	SE-132
	3. Wire harness	-
Only passenger's seat heater does not warm up	1. Front seat cushion heater RH	SE-133
	2. Front seatback heater RH	SE-132
	3. Wire harness	-